



CREATION CLIC DECOR SKIRTING (PRODUCT CODE 5934)

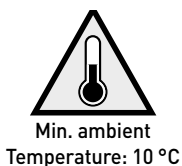

PACKAGING:

Skirting: 5 X 2,40 M = 12 ml
Attachment clips: Kit of 30 clips

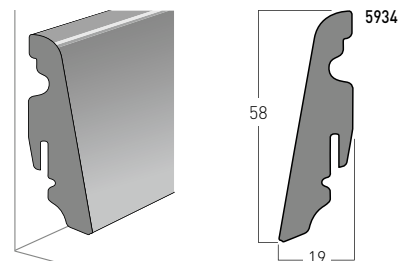

1. SURFACE PREPARATION

- The surface should be sound, clean and dry.
- Make sure that the bottom sections of the wall or partition are sound, hard and ready to receive the skirting attached with adhesive, screws or staples.
- Correct the evenness of the walls or partitions if required by applying a primer + coating, so as to obtain a plane, smooth and non-porous surface.
- Remove paint from painted surfaces.

2. MATERIALS and CUTTING THE SKIRTING

MATERIALS:

- Wood saw
- Mitre box
- Adhesive sealant cartridge
- Fine grain sandpaper
- Sandpapering block

CUTTING THE SKIRTING

Perform the cutting operations using a fine-toothed saw and a mitre box.

- For joins on the same wall, produce a straight cut.
- For corners, cut at 45°.

Sand each cutting edge with medium grain sandpaper followed by fine grain sandpaper.

3. INSTALLATION WITH ATTACHMENT CLIPS code 59350001



POSITIONING OF CLIPS:

A - Case in which the clip is attached to the partition using staples (plasterboard) or screws (solid walls):

- Attach the clips to the wall every 25 to 50 cm according to the straightness of the walls.
- Snap-fasten the skirting by inserting it with a block and hammer.

B- Case in which clip is positioned on the back of the skirting and bonded to the wall or partition:

- Position the clips on the skirting every 25 to 50 cm according to the straightness of the walls.
- Spray the adhesive onto the plane part of the skirting and onto the clips.
- Place the skirting against the wall and apply pressure to ensure satisfactory adherence.
- Repeat the procedure for all the skirting sections.

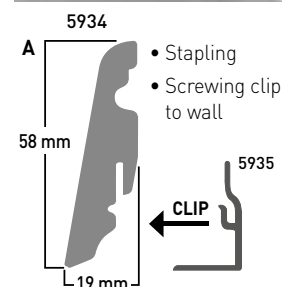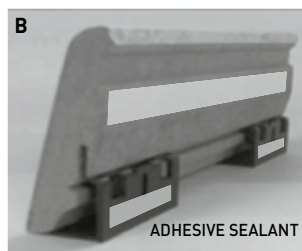

4. INSTALLATION WITHOUT ATTACHMENT CLIPS

C - This method is only recommended on perfectly plane surfaces.

- Spray the adhesive onto the plane part of the skirting.
- Place the skirting against the wall and apply pressure to ensure satisfactory adherence.
- Repeat the procedure for all the skirting sections.

